




INSTRUCTION MANUAL

2IN1 STEAM HANGING IRON

MODEL **MA690**



Steam Iron Parts

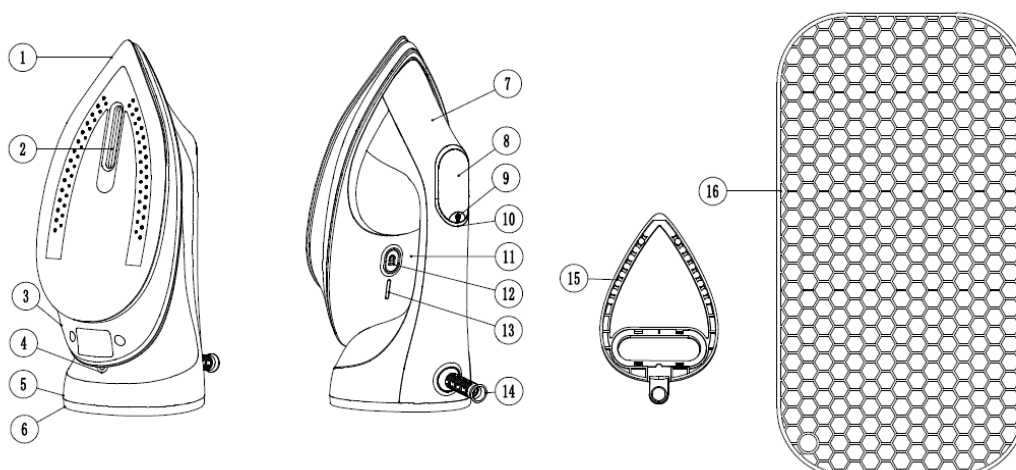

1、Bottom plate 2、silicone 3、Insulated shell 4、Trim strip 5、controller 6、Rear cover 7、Upper cover 8、Perspective panel 9、Switch 10、Decorative circle 11、Base change 12、Button 13、Indicator panel 14、Cord Bushing 15、Brush 16、Silicone pad

Matters needing attention

Before using this product, please read the instruction carefully and keep it for future reference.

Dangerous

- Do not immerse this product in water or other liquids and do not rinse under a faucet.
- Use the appliance with care and pay attention to the steam generated by the ironing machine, which may lead to spatter, scald and other dangers.

Warning

- before connecting the product to the power supply, please check whether the marked voltage is consistent with the local power supply voltage.
- Do not use the product if the plug, power cord or the product itself has become visibly damaged, or if the product has fallen or leaked.
- The product can only be sent to the authorized maintenance center for maintenance. Do not repair the product by yourself, or the warranty will be invalid.
- If the power cord is damaged, it must be replaced by a professional from the manufacturer, other maintenance or similar departments to avoid danger.
- during the electrification of the product, the user shall not leave.
- This product is not suitable for use by children and persons who are physically or mentally disabled or who lack relevant experience and knowledge, unless they are supervised or directed by someone to ensure their safe use and make them aware of the associated hazards.
- Do not let children play with this product.

- keep the product and its power cord out of reach of children under 8 years of age when the product is energized or cooling.
- children aged 8 or above are only allowed to use body products under supervision.
- do not touch the steam head and surface when using. This product will produce high-temperature steam during use, please do not aim at people or animals, and do not iron clothes on the body to avoid the risk of burns.

-be sure to remove the power plug before cleaning the product, installing or removing brush accessories, or filling the water tank.

Pay attention to

The product can only be used with grounded socket.

- if the product is very hot/has been connected to the power supply, do not allow the steam nozzle to come into contact with any surface when placing the product.

-check regularly whether the power cord is damaged.

- do not allow the power cord to come into contact with high temperature steam during product operation.
- do not use this product when the water tank is empty.

-when you leave the product for a short time, please turn off the product power and unplug the power plug.

- after ironing, be sure to turn off the power and remove the power plug, and let it cool for 60 minutes before cleaning the product.
- this product is for household use only. Please do not use this product in the bathroom or outdoors.
- do not drag the product or power cord.
- steam may damage or discolor certain walls or doors.
- according to the design, your product is suitable for using tap water. If the water in your area is very hard, scale may build up.
- do not put perfume, vinegar, detergent, ironing agent or other chemicals into the water tank, as these chemicals are not suitable for use in this product.

before the first use

-remove any labels or protective covers from the steam head and straighten and straighten the power cord before use.

- the first time you use the ironing machine, leave the steam aside for a few minutes. This will remove any impurities and odors that may be left during the manufacturing process.


-In order to avoid circuit overload, it is recommended not to use the same socket circuit with other appliances.

-When opening the package, look at all the items and parts you received to avoid being discarded.


Installation and use

1. take out the product, remove all the packaging materials on the product.

2. Hold the main engine and push the water tank inward. When you hear the "click" sound, the water tank will pop out automatically. Open the water tank and fill the water tank with water. Make sure the tank is at least one-third full of water before filling it back into the tank.
3. Place the base on a flat table, align the host with the base and hear a "click" sound. The base and the host are assembled together

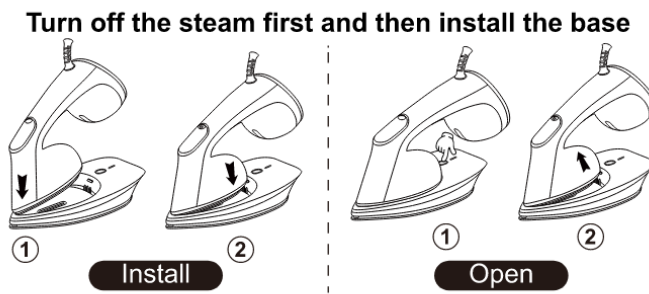

4. Connect the device to the power outlet, turn on the power, the green indicator lights up, and the device enters the standby state. Touch the switch, the product enters the heating state, when the indicator light is long bright, the preheating is complete, you can start to use. Press the button, the product into the small steam, press the button again, the product into the large steam. Press the button again and the product stops vapiing. Long press the switch to enter the standby state, pull out the power cord from the power socket, you can turn off the hanging press.

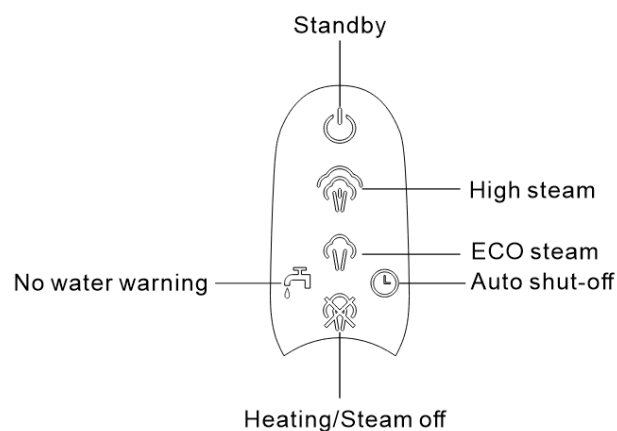

5. This product has low temperature protection function. When the inside of the ironing machine cannot reach the specified temperature, the low temperature protection will turn on the indicator light blue, and the pump cannot work in this state. Prevent water from vaporizing, splashing directly and scald the user.
6. This product has Auto shut -off function. After 8 minutes without operation, it will enter automatic power off state. Press the power button or steam button again to exit the automatic power off state
7. This product has a water shortage protection function. After the water tank is dry for 30 seconds, it will enter the water shortage protection state. Press the power switch or steam switch again to exit the water shortage protection state.

8. This product has an automatic cleaning function. In standby mode, press the switch button for 8 seconds, and the product will enter the automatic cleaning state. The large and small steam indicator lights will flash simultaneously. After working for 2 minutes, the product will return to standby mode. During this period, if you want to exit the cleaning state, simply press the switch button for 8 seconds to exit the cleaning state.

Ironing clothes

Steam irons are very easy to use, suitable for ironing wrinkled/creased clothing, curtains, and refreshing decorative fabrics, and can be used on most knitted fabrics.

Note: The steam hanging iron is designed to be used as a hanging iron in the main engine state and in the combination state as an iron

1. Check whether the back of the cloth is breathable, so as to avoid steam gathering on the cloth and making the cloth wet.
2. Check the pockets to make sure they are empty.
3. Check the back of the clothes for objects easily damaged by steam.
4. It is recommended not to use hanging ironing machine around the metal parts of clothes, because high temperature steam will cause the metal parts to fade.
5. When you press the steam button, you will feel the vibration and hear a subtle buzzing sound, which is normal.
6. When ironing, use the fabric brush gently in the fabric crease up and down movement, you can iron the crease.
7. If the fabric brush is not used on the ironing machine, please keep at least 5cm distance between the steam head and the cloth.
8. If hang iron machine sound humming sound become louder and no steam ejected, this indicates water shortage in the tank, please check the water tank.

After each use

1. When the device is stopped in use, continue to turn on the power and heat for about 15 seconds, until there is no steam, press the power switch or pull out the power outlet of the power cord.
2. remove the tank, open the tank inlet cover and reverse the tank (in a sink or bucket) to empty the remaining water in the tank.
3. Place it vertically on the flat desktop and wait for the product to cool before collecting.

Care, cleaning and storage

1. Remove the bristle brush or mesh brush on the steam head, and then use a wet cloth to clean.
2. do not use harsh or corrosive cleaners or solvents.
3. do not soak the steam ironing machine in water or other liquids.
4. don't throw it or try to bend it.
5. Please do not attempt to disassemble or disassemble the appliance.
6. Empty the water tank after each use.

7. Avoid storing the appliance in damp environment.
8. Do not close to heat sources or direct sunlight on electrical appliances.
9. Always ensure that steam outlets are clean, free from fouling and not blocked.
10. It is recommended to store the ironing machine vertically in a flat place, such as a wardrobe.

Troubleshooting guide

FAULT PHENOMENON	CHECK THE REASON
Hang iron machine does not heat	* check whether the plug is inserted correctly. * check power supply.
There is no steam from the ironing machine	* check whether the water tank is loaded correctly. * check the water level of the tank. * press the steam button hard.
the water tank leaks	* ensure that the water level does not exceed the maximum level. * make sure the cover is properly closed. * please follow the instructions in the manual and always keep the ironing machine in an upright position.
hanging hot machine work loud pumping sound	* check whether the water tank is loaded correctly. * check the water level of the water tank. * it is normal that there will be air in the water pipe for a period of time if it is not used for a long time.
Avoid discoloration of metal accessories on clothing	* do not use steam ironing machine directly on metal fittings. * use steam sparingly when metal fittings are around.

Instruction **MANUAL**



MEGA delivers high-quality, durable kitchen & home products designed for top performance. Visit our website for Info & more.



**MEGA TECHNOLOGY
UNITED KINGDOM**

WWW.MEGAMEETUK.COM