

Environmental checklist & Food grade exposure checklist

Environmental checklist:

According to "The administrative measures for restricting the use of harmful substances in electrical and electronic products" Pls list the name and content of toxic and harmful substances or elements that may be contained in the electrical and electronic product in below form.

Component	Toxic and harmful substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	ChromiumVI (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB Board	X				X	X
Lid assembly						o
power cable		o	o	o	X	X
Heating plate assembly	o	o	o	o	o	o
SS pot lid/body	o	o	o	o	o	o
Internal wire	o	o	o	o	o	o
Screw	o	o	o	X	o	o
Base/out-body	o	o	o	o	o	o
Others						

This form is compiled in accordance with the regulations of SJ/11364

o Represents the content of the toxic and harmful substance in all homogeneous materials of the component are below the prescribed limits.

X Represents the content of the toxic and harmful substance at least in one of homogeneous materials of the component are beyond the prescribed limits.

Note: Material use for my company's product as far as possible to use non-toxic harmless material,but if there is some material did have toxic, the components of substances or elements cannot be replaced by toxic and harmful substances due to the global development level and the current technological level of the industry, technical and material upgrade without prior notice.

Food grade exposure checklist:

Please use the product normally according to the instructions

This product meets the requirements of the relevant national food safety standards. The food contacted materials and their compliance with the standards are described below

Component	Material	Standards compliance
Plastic lid	Polypropylene	GB4806.7-2016
Stainless steel body	SS	GB4806.9-2016
Stainless steel lid	SS	GB4806.9-2016

Reminder: Different items using food contact parts and materials may be different, please refer to the actual purchased item Use Conditions: stainless steel parts avoid contact with strong acid substances

Note: This series products contains the above food contact materials, some items may not contain individual materials, please refer to the actual product.

Exception failure and trouble shooting

If you encounter problems with this tea maker, please check the following before applying for service. If you can't solve the problem, please contact us.

Problem	Cause	Solution
Light is off	Can't boil water	1.Check the switch, plug, power lead and Coupler is intact and plug well; 2.Move to appointed maintenance department
	Can boil water	Main board is damaged Send the designated maintenance department for repair
Light is on	Can't boil water	1.Failure of main thermostat 2.Electric heating tube components burn out 3.The board connection is disconnected. 4. The main circuit board is broken 5. Temperature Sensor is broken Send the designated maintenance department for repair
	Large boiling water overflow	1.Main board is damaged 2.Temperature sensor is abnormal 3.Whether the water exceeds the MAX limit. 1. Move to appointed maintenance department 2.Move to appointed maintenance department 3.Add water according to the scale
Operation button abnormal	1.Main board is damaged 2.control board is damaged	Send the designated maintenance department for repair
	The display shows fault codes	Sensor loop malfunction Send the designated maintenance department for repair

Safety warning

Please read this manual carefully before use, and please keep it properly.

In order to make sure your safe use and avoid injury or property damage to you or others, please be sure to observe the following safety precautions. It will lead to accident if not follow the safety warnings and incorrect use:

- 1.It is forbidden to immerse or rinse the tea maker, power cord, power plug or power base in water, or it will affect the electrical appliances safety performance and cause danger.
- 2.When operating, please use the safety handle and do not touch the spout and the hot steam overflowing from the pot. When boiling water, cover the lid, and do not open the lid during boiling to avoid burns.
- 3.During maintenance, it is forbidden to use other extension cables, and must be replaced with special flexible cables or special components purchased from other manufacturers or maintenance departments.
- 4.When the tea maker is damaged, must send it to a professional or after-sales service to repair. The user cannot disassemble and repair it by himself.
- 5.Do not hang the power cord on the edge of the desk or touch high temperature objects.
- 6.Do not insert pins, wires or other objects into any gaps or openings in the tea maker, the base, to avoid electric shock.
- 7.Children are forbidden to play the product as toy.
- 8.Unattended children or disabled persons are forbidden to use the product.
- 9.If no water in the pot, or when adding water, or when not in use, or when cleaning or moving the tea maker, or when there is a problem with the tea maker,must make sure that the tea maker is disconnected.
- 10.It is forbidden to use this product on an indrino or unstable table, and keep it away from heat sources to avoid damaging the plastic parts. Do not place it near or on other electrical appliances.
- 11.Must use a wall socket with a grounding connection above 220V~10A. The plug must be inserted tightly. Do not use a universal socket with other electrical appliances at the same time.
- 12.If the tea maker is filled with too much water, boiling water may spray out. When boiling water, do not dry burning.
- 13.The tea maker is matched with the power base to use, and cannot be used with other power bases
- 14.When adding water, please move the tea maker away from the base and add water again. The water traces on the tea maker bottom must be wiped off before placing it on the power base.
- 15.Do not share the same multi-socket with other electrical appliances.
- 16.Do not put the tea maker in humid, unstable or near other fire or heat sources places.
- 17.Please put the tea maker out of the reach of children, Because it may touch the control buttons and cause error.
- 18.Before putting the tea maker into the base, please confirm whether there are foreign objects on the bottom and base,if yes please clean it before putting. Rotate the tea maker left and right after putting it in the base,and make sure the coupler is in good contact.
19. If there is a fault during use or the display shows a fault code>Please disconnect the power supply and power it on again. Do not continue to use if the fault is not resolved.And contact our company's after-sales service personnel, do not replace non-original parts or disassemble and repair by yourself.

⚠ If the power cord is broken, Must use special cords or special components to replace which is purchased from its manufacturer or maintenance department.

成品尺寸: 210x140mm

此P为封底

此P为封面

Instruction MANUAL



INSTRUCTION MANUAL

TEA MAKER



MODEL MT317



MEGA delivers high-quality, durable kitchen & home products designed for top performance. Visit our website for info & more. WWW.MEGAMEETUK.COM



Product structure diagram

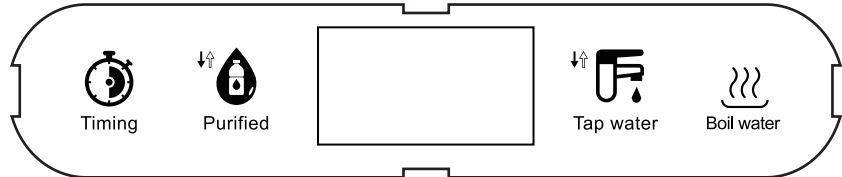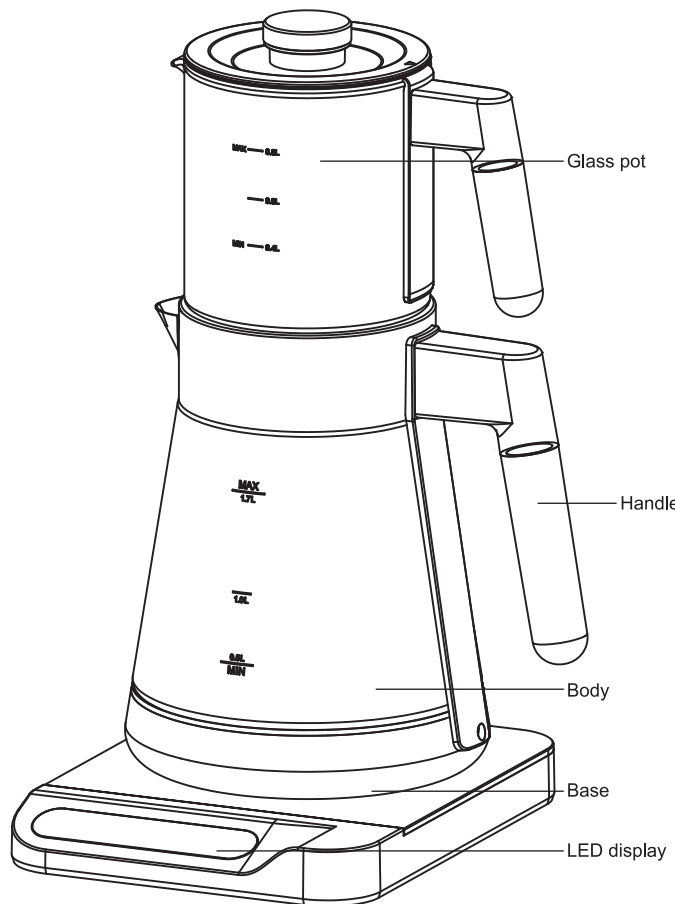

Instructions for function operation

Before using the tea maker,Please follow below preparation:

- Using for the first time or after a long time without using, please add water to the maximum water level and boil it for 1-2 times to clean the inside of the tea maker body. Please do not drink it.
- Do not touch the spout and the overflowing hot steam from the pot during boiling water. When boiling water, please close the lid, and do not open the lid during boiling to avoid burning.
- This product is a multifunctional temperature-controlled tea maker. The main unit can be used independently, and it can also be used with glass pot/other components to achieve low-temperature brewing of beverages

For the first time using, Please follow the below operations:

1. Take out the kettle body from the base, do not clean the kettle with the steel wool or any chemical or powdered detergent.
2. Add water below 70 degrees into the kettle, and the amount of water cannot exceed 2/3 of the maximum waterlevel.
3. Cover the tea maker lid well and put it on the power base with well power connecting.Turn on the power, all the function lights will be on for one second, then all the function pattern will be on andthe LED display will flash "-." and ⓪ the button light will flash with red color. Then press the "Timing" button for 5 seconds and all function button lights will be flash,and it will start to heat,the LED display will show theinstant water temperature.
5. After finishing boiling, it will enter into stand-by mode.

Stand-by Mode

1. Turn on the power, the function indicator lights and digital light all one second, then it will enter standby. The standby digital flash shows "-.", and the function indicator light remains on all the time.
2. Power on and enter standby mode. If there is no operation, it will shut down after 5 minutes. All the digital and function indicator lights went out. Pressing any button can wake it up.

⓪ "Power button

1. When on standby mode, press power button, The LED display and all function patterns will be close off.
2. Press the power button during working will cancel the operation and enter into standby mode.

"Boil water "Fast Boiling Button

1. When on the stand-by mode, press the "Boil water" button to enter the working mode.all the function lights are on,and digital display shows instant temperature. After finish boiling it will automatic enter into the keep warm mode, the function indicator is always on.Digital cross-display of temperature and "BB" (BB represents in keep warm mode). The keep warm temperature is 90 ℃±3 ℃, and the default keep warm time is 2 hours.
2. During the working mode, can press the ⓪ "power button to stop working. Then it will go back to the stand-by mode, all the functions lights are on, and the LED display will flash"-.". If without operation within 5 minutes, then it will enter into sleeping mode. The ⓪ "button light will flash with red color, and all the other function lights will be off.

"Tap Water" Button For Tap Water

1. When on the stand-by mode, press the "Tap water" button to set the keep warm temperature.the setting temperature ranges are 45-50-55-60-65-70-75-80-85-90 ℃. If there's no further operation within 3 seconds after setting,it will automatically start boiling during the boiling time.all the lights are on and the "Tap water" button is flashing. After finish boiling then will enter into the keep warm mode. The default keep warm time is 2 hours.Or can press the "Timing" button before boiling to choose the desired keep warm time .the setting time rang is from 1 to 10 hours). After enter into the keep warm mode,the "Tap water" button light will flash each 3 seconds, and the LED display shows the instant temperatures.
2. During the working mode, can press the ⓪ "button to stop working. Then it will go back to the stand-by mode, all the functions lights are on, and the LED display will flash"-.". If without operation within 5 minutes, then it will enter into sleeping mode. The ⓪ "button light will flash with red color, and all the other function lights will be off.

"Purified"Button for Pure Water

1. When on the stand-by mode, press the "Purified" button to choose the desired temperatures,the setting temperature ranges are 45-50-55-60-65-70-75-80-85-90 ℃. If there's no operation within 3 seconds after setting,it will automatically start boiling.during the boiling time.all the lights are on and the "Purified" button is flashing. After finish boiling then will enter into the keep warm mode, the ⓪ "button light will turn into blue color.The default keep warm time is 2 hours. (Or can press the "Timing" button before boiling to choose the desired keep warm time .the setting time rang is from 1 to 10 hours). After enter into the keep warm mode,the "Purified" button light will flash each 3 seconds, and the LED display shows the instant temperatures.
2. During the working mode, can press the ⓪ "button to stop working. Then it will go back to the stand-by mode, all the functions lights are on, and the LED display will flash"-.". If without operation within 5 minutes, then it will enter into sleeping mode. The ⓪ "button light will flash with red color, and all the other function lights will be off.

"Timing"Button

1. After selecting the desired function and press the "Timing" button, then the "Timing" button light is flashing which means can choose the desired keep warm time.
2. The set keep warm time range is 1H-2H-3H-4H-5H-6H-7H-8H-9H-10H, and each time is 1 hour.


Dry burn protection

Double anti-dry protection function

1. When the tea maker is heated without water, the product's dual anti-dry protection function will automatically stop heating to prevent damage to the tea maker.
2. When the above situation occurs, please unplug the power plug from the socket and wait for the tea maker to cool down naturally (about 10 minutes) to let it be normal.

Do not use cold water for cooling directly, as it will reduce the service life of the heating system.

Circuit schematic diagram

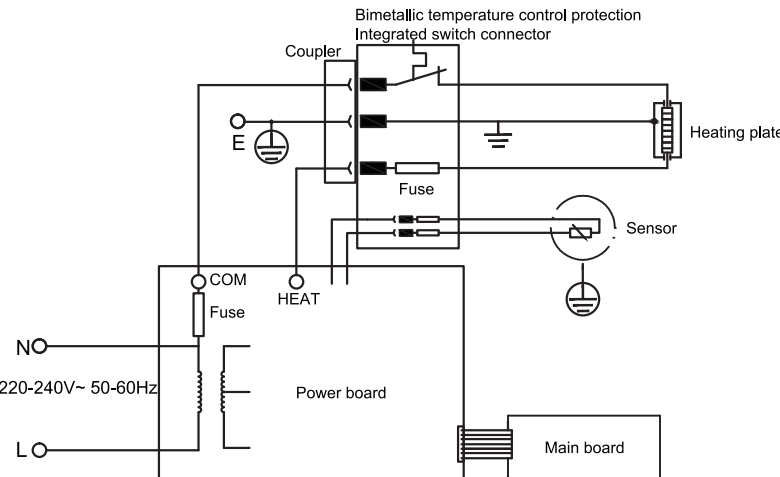

Cleaning and maintenance

Tip:

- Please unplug the tea maker before clean it.
- Wait the tea maker completely cooled down before cleaning
- In order to prolong the service life of the tea maker,the sediment in the tea maker should be cleaned regularly.
- If the tea maker isn't used for a long time, please unplug the power cord from the socket and protect it from moisture,dust and insects;
- Do not clean with steel wool or any chemical or powdered detergent;
- To cook colored ingredients may cause staining of some product parts;

Cleaning steps:

1. Unplug the power plug (do not operate the plug with wet hands);
2. Pouring 0.5L white vinegar into it and soak for more than 1 hour.
3. Pouring out the white vinegar in the pot and wipe off the remaining sediment with a damp cloth;
4. Add water to boil and pour out the hot water in the tea maker , then wash for 2-3 times.
5. Wipe the outside of the pot with a wrung wet cloth;
6. Placed it in a dry and ventilated place, protected it from moisture, dust and insects.

Customer warranty card

User name: _____ Article no: _____

Contact no: _____ PS Identity: _____

Purchasing date: _____ Purchase Place: _____

Contact address: _____

Thank you for purchasing our products. In order to provide the high quality after-sales service, please cooperate with us as follows:

1. Please ask the seller to issue the sales proof as the warranty basis when purchasing.
2. Please fill the card detailed and stamp the distributor's seal on the card to take effect.
3. Please read the terms of the maintenance regulations carefully;
4. If you need any service, please contact the local dealer directly or call the customer service hotline of the headquarters.

Maintenance regulations:

I. Within warranty time, Under normal use, warranty is one year (from the buying date, based on the sales certificate)

II. Within warranty time, under one of below situations, we will charge material and service cost, hope you can understand!

1. Inappropriate using,maintain or keeping damage;
2. Not three guarantees repairer damage;
3. Without three guarantees certificate;
4. Three guarantees certificate item is not match with repair item, or modify;
5. Using lead to outside dry;
6. Commercial damage;
7. Force majeure factors broken
8. This Warranty Card cannot reissue,please keep it carefully;
9. If not under repair scope or exceed warranty time products, we will also service for you, and only charge Component material cost.

III. This card will not be reissued, please keep it properly.

Dealer tel no: _____

(Dealer)Signature and seal : _____

Service hotline : _____

Local service center please contact with the local dealer

*This page is for user keeping as warranty proof

Year Month Day